

INFORMATION AND ENTERTAINMENT SYSTEM - VEHICLES WITH: INCONTROL TOUCH PRO
FRONT DOOR MID-RANGE SPEAKER (G2133249)

REMOVAL AND INSTALLATION

87.01.03	FRONT DOOR MID- RANGE SPEAKER - RENEW	ALL DERIVATIVES	0.40	USED WITHINS	
87.02.03	FRONT DOOR MID- RANGE SPEAKER - RENEW	ALL DERIVATIVES	0.40	USED WITHINS	

REMOVAL



NOTES:


- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

Remove the front door trim panel for access only.

Refer to: Front Door Trim Panel (501-05, Removal and Installation).

2.

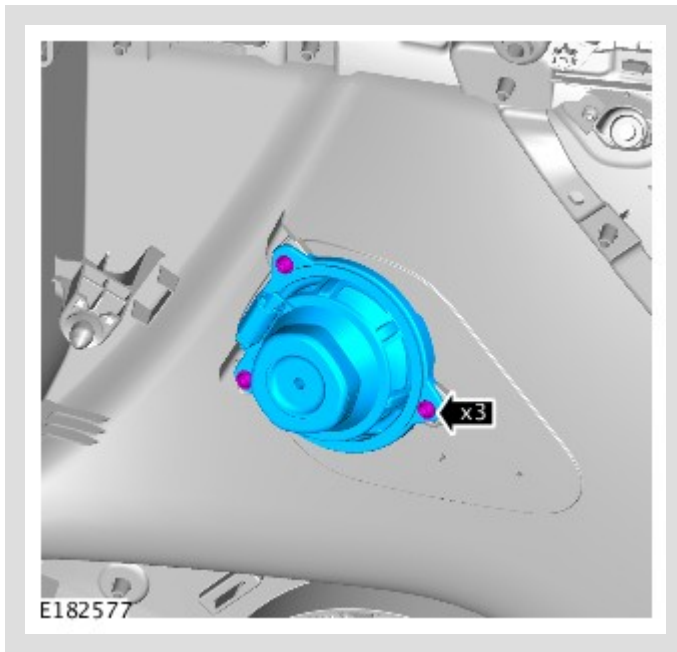

- Remove the 3 screws.
- Remove the speaker.

INSTALLATION

1.

Install the speaker and tighten the 3 screws to the correct torque.

Torque: **2.5 Nm**

2.

Install the front door trim panel.

Refer to: Front Door Trim Panel (501-05, Removal and Installation).